

Krug Compressors and Hand Pumps

Bergquist



H50G

**KRUG
COMPRESSOR
HOSE
KIT**

Tank Evacuation Vapor Compressor

The Krug compressor transfers liquid by increasing vapor pressure in the tank being emptied, and decreasing vapor pressure on the tank being filled. A separate hose transfers the free flowing liquid.

Note: Check the compressor crankcase oil before each use. The compressor requires 5/8 of a pint of SAE 40 oil, 1" on the dipstick. Low or no oil may damage the compressor.


Tank Evacuation Vapor Compressor

Part No.	Engine Fuel	Inlet/Outlet
H50LPH	Propane	1/2" FNPT
H50GH	Gasoline	
76000I	Compressor Only	

Part No	Kit Contains
K-K2	Vapor lines & connectors include: 2 - 13ft 1/2" vapor hoses with 1/2 MNPT connections 2 - 1/2" ball valves 1 - 1 1/4" female acme coupling 1 - 1 3/4" female acme coupling 1 - 1 1/4" female acme x 1 3/4" male acme adaptor 1 - POL fitting with 1/4" brass elbow & 0-300 pressure gauge to monitor differential pressure between tanks
	Liquid line & connectors include: 25' of 3/4" liquid hose with 1 3/4" female acme couplings 1 - N456 liquid transfer valve with adaptor

bergquistinc.com | 800 537 7518

USING A PORTABLE LP-GAS COMPRESSOR

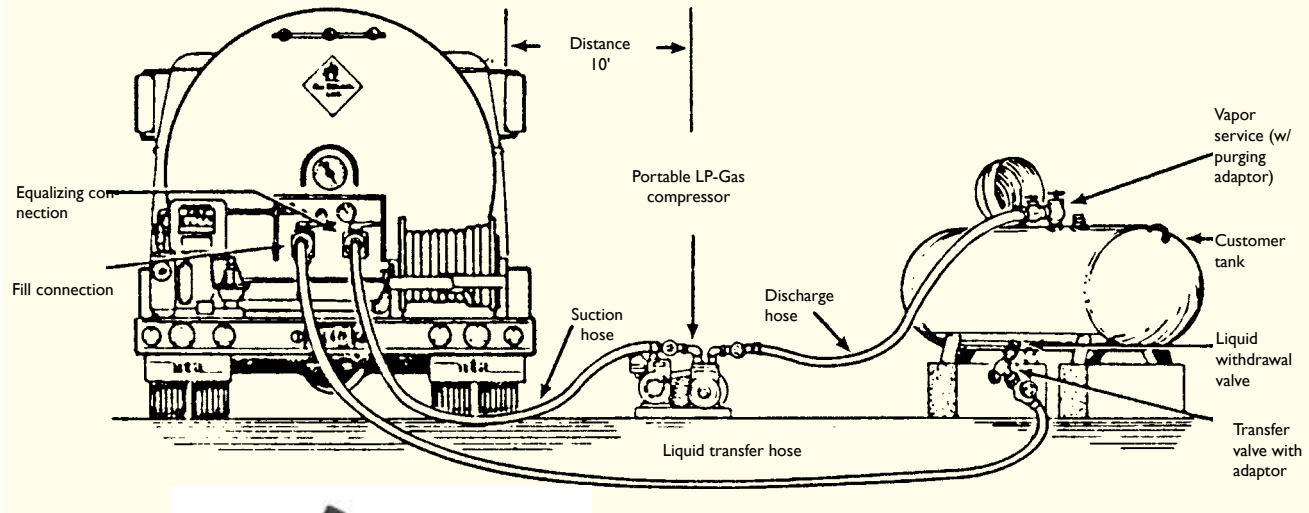

Simple piston hand pump for use in filling portable and motor fuel cylinders. Six gallon capacity at 40 strokes per minute.

Krug Hand Pump

Part No.	Inlet	Outlet
760002	1"	3/4"
M7A	Shaft packing only	

